

## Manual for Temposonic G analog


2007. 12. 20

## 1. 소프트웨어 PC에 설치하기


CD ROM Software setup.exe


2. G-series Field Setup software를 통하여 센서와 통신하기

PC 가 ' Communications ' ' Select COM Port.. '

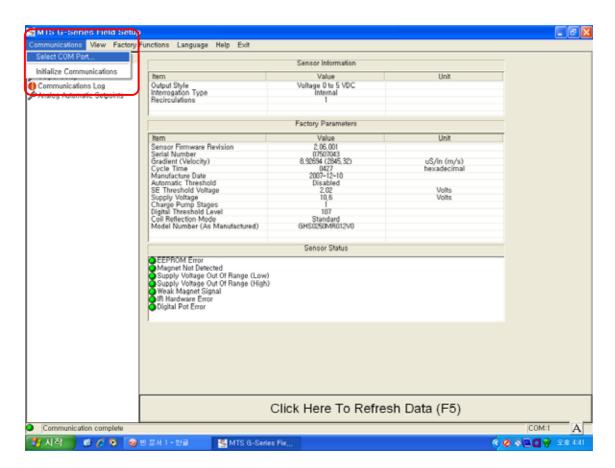

'OK'

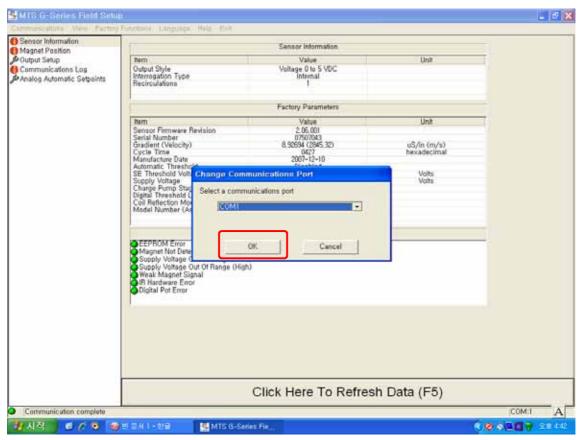

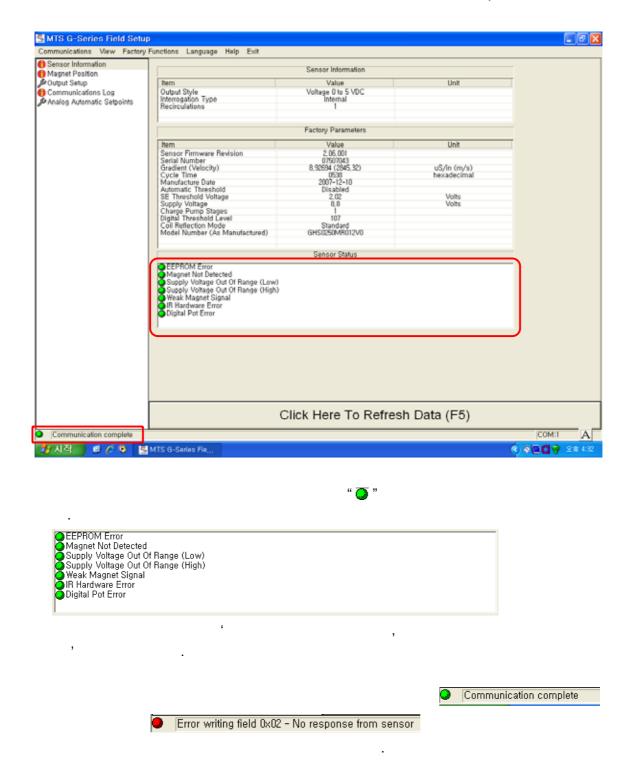


## 3. 센서 출력 값 변경

'Output setup'

.

.)

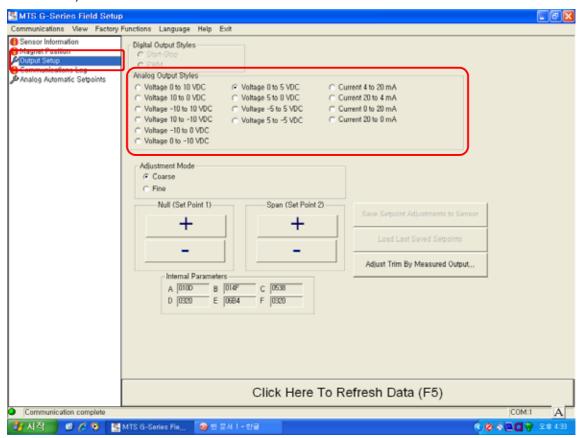

(Analog Output Styles)"

가

Analog Output Styles

C Voltage 0 to 10 VDC

Voltage 0 to 5 VDC

C Current 4 to 20 mA

Voltage 10 to 0 VDC

Voltage 5 to 0 VDC

C Current 20 to 4 mA

Voltage -10 to 10 VDC

Voltage -5 to 5 VDC

C Current 0 to 20 mA


Voltage 10 to -10 VDC


Voltage 5 to -5 VDC

C Current 20 to 0 mA

Voltage -10 to 0 VDC

Voltage 0 to -10 VDC

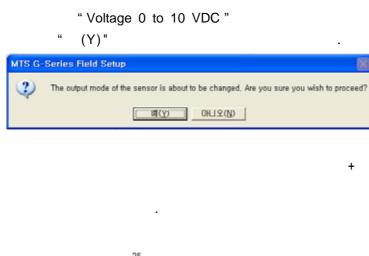


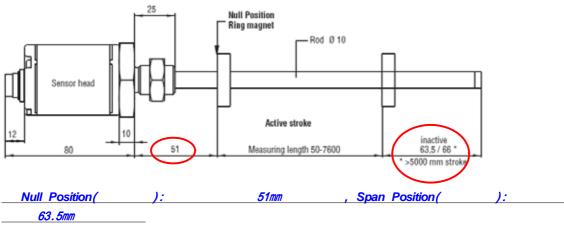

0V ~ 10V 가

4. 'Adjustment Mode'에서 Null 과 Span 설정하기

.>

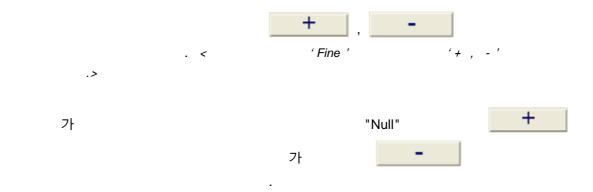

```
Null (Setpoint 1)

Null (Setpoint 1)

Page Setpoint Adjustments to Sensor

The save Sensor

The save Setpoint Adjustments to Sensor

The save Setpoint Adjustments to Sensor

The save Se
```

## 주식회사

187-7 B 1204

TEL: (032) 670-8762~4

FAX : (032) 670-8765

http://www.mtssensor.co.kr http://www.deltacontrol.co.kr

